

ROLLEIKIN 2-ATTACHMENT WITH REWIND

Designed for: Taking up to 36 exposures $1 \times 1\frac{1}{2}$ in. on 35-mm.-film. Ideal for series of pictures and color photography on miniature film.


The attachment consists of:

1. Metal Case
2. Film Guide Frame
3. Take-up Spool
4. Exposure-Counter-Knob
5. Extension-Spindle for Rewind-Knob
6. Inner Spool Knob
7. Focusing Screen Mask
8. Direct View Finder Mask
9. Lens Hood Mask.

Applicability of Rolleikin 2: Fits Rolleiflex above numbers 1 100 000 and Rolleicord above numbers 1 137 000. (The combination back for two picture sizes, which was originally not provided below these serial numbers, can be ordered additionally). — Earlier Rollei-models use Rolleikin 1 (with special back).



1

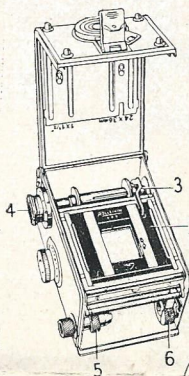

7



8




9

A. Installing the Counter-Knob


(The exposure-counter-knob accepts 35 mm and No. 120-(B 2)film. Your dealer will gladly take care of the fitting for you.)

1. Remove the top film-knob by unscrewing the 3 counter-sunk screws.
2. Fasten counter-knob tightly by means of the three screws supplied.
3. Remove protective lining from gummed insert and paste it on the counter-knob.

(A)

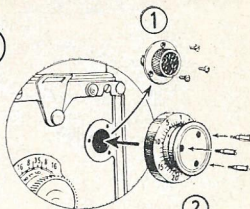


2

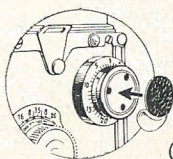

3

6. Insert the frame-finder mask underneath the button above the frame-finder in such a way that the edge (marked with a white dot) is pushed-in first, then press the two lateral fixing buttons into position.

(B)

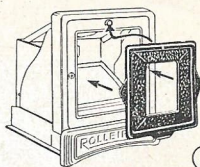


(6)

jma1965@archive.org


C. Loading

1. Open camera back, pull rewind-knob, fit-in film cartridge on the left and then insert fully.
2. Introduce film-lead (which — in the Automatic Rolleiflex — first passes through the film-feed rollers) into the double slit of the take-up spool, letting it touch on the right. Tighten up by giving spool a short turn.
3. Make sure the mouth of the cartridge points straight ahead in line with the tightened film lead, then close back.
4. Press-and-release counter-knob until the red dots of the Rolleikin counter face each other. (Disregard counter for No. 120-[B 2-] Film completely.)
5. To set counter for the first exposure: Advance counter dial to No. 1 by actuating filmtransport three times.


(C)

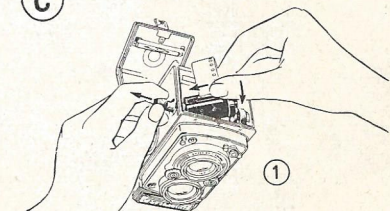


(1)

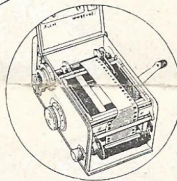





(2)

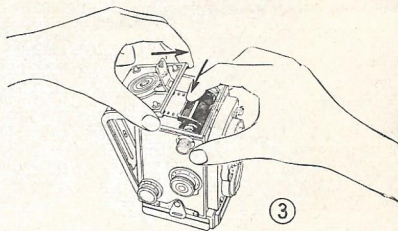

(3)



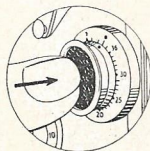


(4)

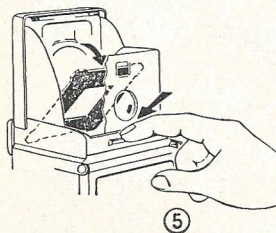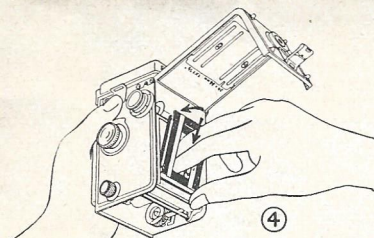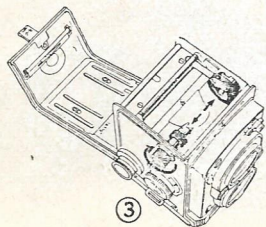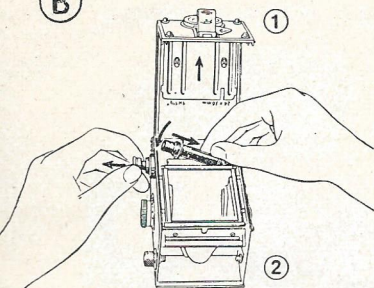B

B. Assembling the Rolleikin

1. Adjust film pressure plate by a sliding movement, pressing down at the same time, thereby bringing the inscription "24×36 mm. (1×1½ in)" into view.
2. Pull counter-knob, fit-in take-up spool on the right and insert completely.
3. Rewind-Parts: Screw extension-spindle on rewind-knob by rotating the latter. Snap inner spool-knob over opposite spool bearing pin, (slipping the metal tongue between the rollers of the film-feed when using a Rolleiflex).
4. Inserting the film guide frame: Press spring actuated clamp-bar at an acute angle (as shown) against the bottom of the film gate and insert completely. To remove: Push frame downward (against the clamp-bar) and lift out.
5. First insert forward edge of focusing screen mask under the grip, snap down and secure by pressing the retaining device. Be sure the mask is properly centered inside the ground glass frame.

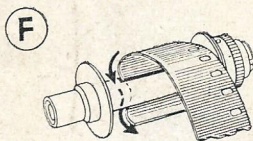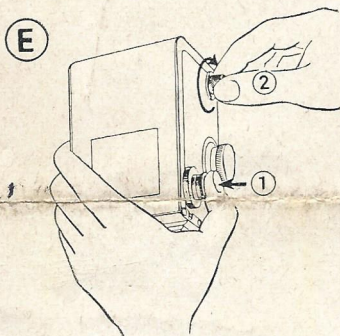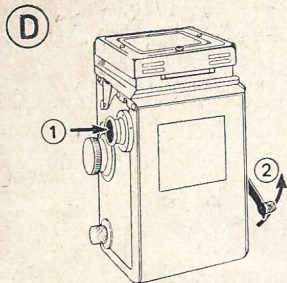

①

D. Filmtransport

1. Press-and-release counter-knob before actuating filmtransport. The exposure counter advances automatically to the next number.
2. Advance film as usual to the stop

E. Rewinding

1. After the last exposure has been made, rewind film by keeping counter-knob pressed down,
2. simultaneously rotating rewind-knob clockwise.

F. Note

1. The rewind also permits the removal of only partially exposed films. In order to prevent the film lead from slipping into the cartridge when rewinding, be sure to thread the film backward, i. e. against the winding direction into the double-slit of the take-up spool when loading.

When reloading a partially exposed cartridge, advance film two frames beyond the last exposure (skipping one frame for safety).

2. Always adjust film pressure plate properly (see B 1)! (A sure sign of incorrect adjustment when using the Rolleikin: Camera back will not close all the way.)

+

Indicate serial numbers of camera and/or lens when ordering accessories to ensure correct supply.

FRANKE & HEIDECKE · BRAUNSCHWEIG